



The Velarian IV Installation Guide

Contents:

- 4 x Screws
- 4 x Fischer wall plugs
- 4 x M4 Grub screws
- 1 x 2mm Hexagon / Socket Wrench
- The Velarian III


Tools & Materials Required:



- Spirit level
- Drill
- 6mm masonry drill bit
- Pozidriv or Phillips screwdriver
- Pencil or fine marker
- Tape measure
- Safety goggles & PPE

Step-by-Step Installation Guide:

1. **Choose your surface:** For best results, mount onto a masonry wall or position the centre spigot directly over a wall stud.
2. **Mark your drill points:** Hold the backplate in position using a spirit level. Mark the centre of all four mounting holes.
3. **Drill the holes:** Use the correct drill bit for your wall type. Always wear appropriate safety equipment and PPE.

4. **Insert wall plugs:** Ensure the plugs are flush with the wall — not proud or recessed.
5. **Mount the centre spigot:** Align the keyway on the back of the spigot with the centre hole and secure with the screw provided.
6. **Install outer spigots:** Repeat the process for the left and right spigots, maintaining alignment with the backplate.
7. **Attach the main body:** Slide the main body over all four spigots. Align the cut-out at the base and tighten the central grub screw.
8. **Final check:** Ensure the body is securely seated and the grub screw is firm — but don't overtighten.
9. **Step back:** Admire the presence of engineered elegance as The Velarian claims its space.

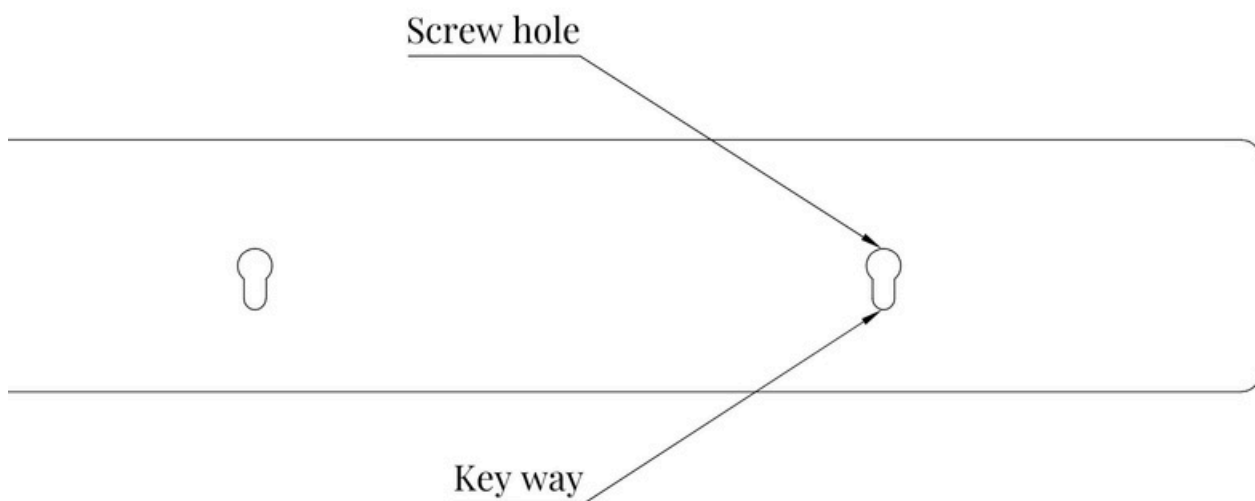

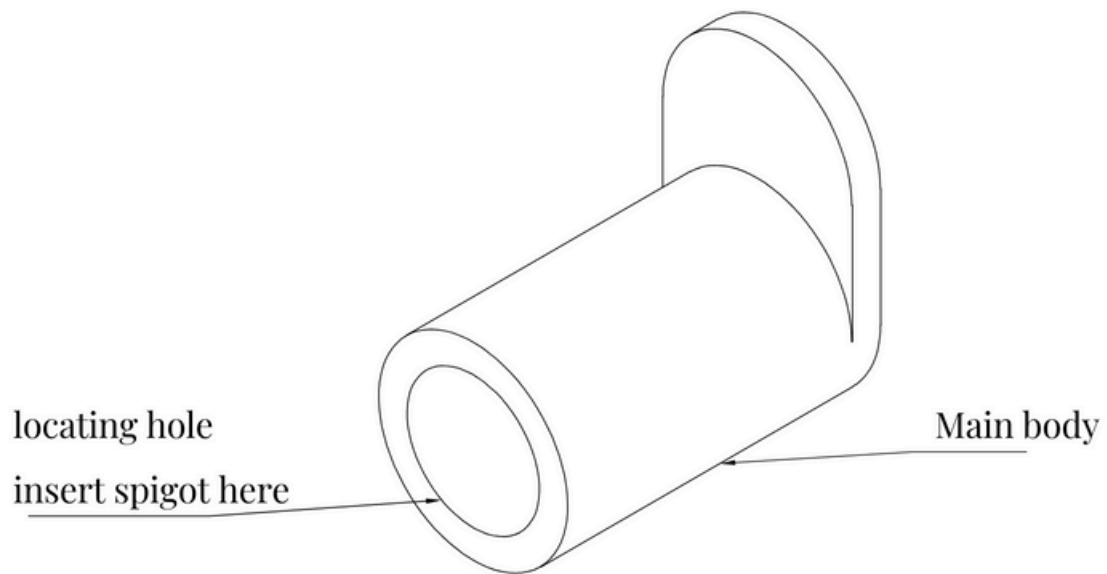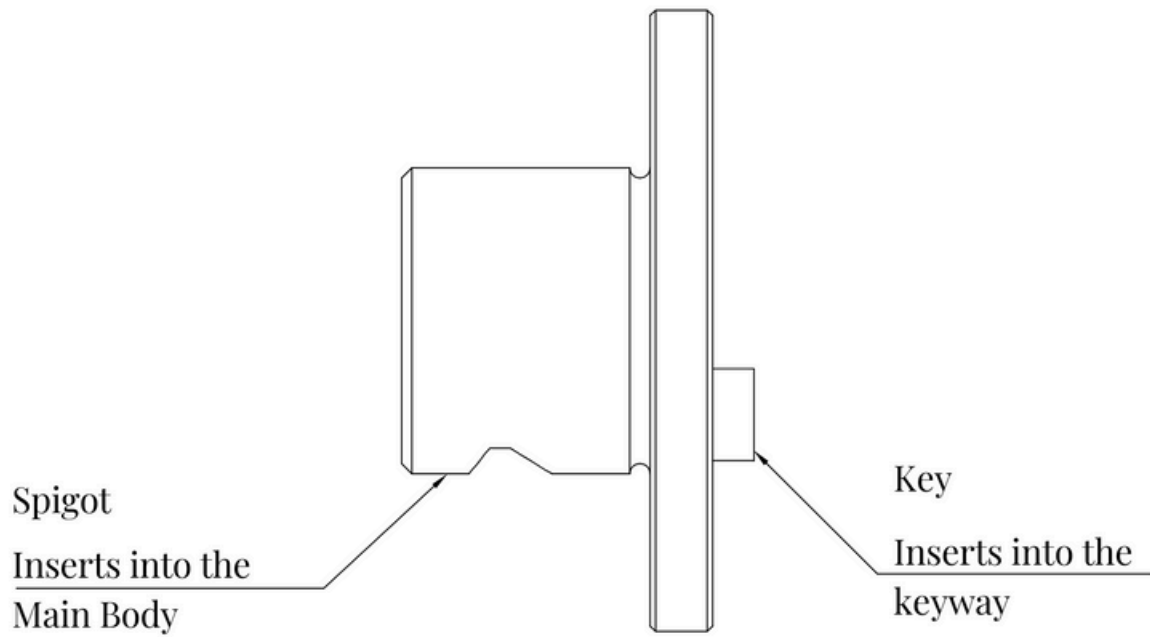

Need Help? If you experience any difficulties during installation, or have questions about your Velarian, we're here to help. Please contact us at contact@harroldandlloyd.com and a member of our team will assist you promptly.

Thank you for choosing Harrold & Lloyd.